
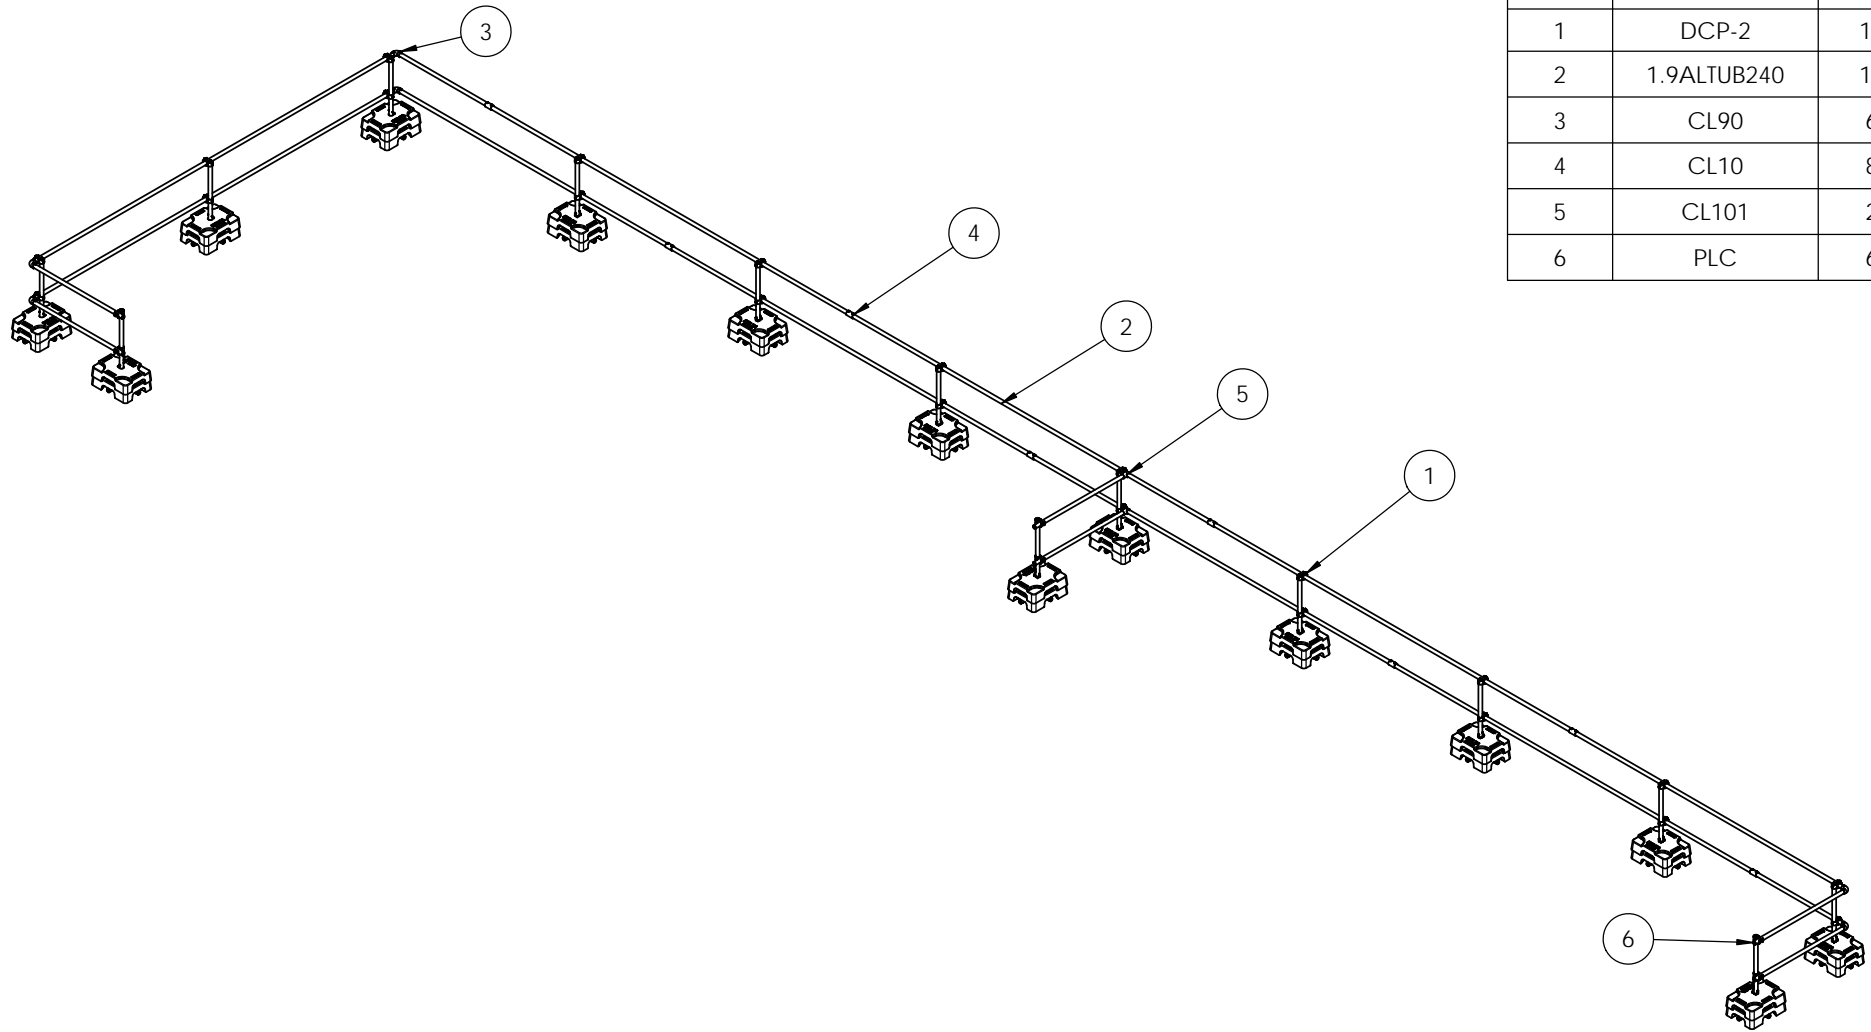


MUST BE INSTALLED AT 12" FROM THE LEADING
EDGE WHEN THERE IS NO PARAPET WALL

| | | | |
|---|----------|---|------------|
| DO NOT SCALE DRAWING | | REVISION | |
| TITLE: VSS COMPACT 90° CORNER WITHOUT PARAPET WALL | |  | |
| 7000 BOUL. INDUSTRIEL, CHAMBLY, QC, J3L 4X3 TEL: 888-550-4341 www.deltaprevention.com | | | |
| DWG NO. | | 17041803 | A3 |
| SCALE: 1:200 | UNIT: IN | SHEET 1 OF 2 | 2017/04/01 |



| ITEM NO. | PART NUMBER | QTY. |
|----------|-------------|------|
| 1 | DCP-2 | 14 |
| 2 | 1.9ALTUB240 | 12 |
| 3 | CL90 | 6 |
| 4 | CL10 | 8 |
| 5 | CL101 | 2 |
| 6 | PLC | 6 |

MUST BE INSTALLED AT 12" FROM THE LEADING
EDGE WHEN THERE IS NO PARAPET WALL

| | | | |
|---|----------|--------------|------------|
| DO NOT SCALE DRAWING | | REVISION | |
| TITLE: VSS COMPACT 90° CORNER WITHOUT PARAPET WALL | | | |
| 7000 BOUL. INDUSTRIEL, CHAMBLY, QC, J3L 4X3 TEL: 888-550-4341 www.deltaprevention.com | | | |
| DWG NO. | | A3 | |
| 17041803 | | | |
| SCALE: 1:200 | UNIT: IN | SHEET 2 OF 2 | 2017/04/01 |